

HANDBOOK







WARNINGS



Set Active Box in lock position when you are not wearing MATE.



UNBOXING & PREPARING MATE

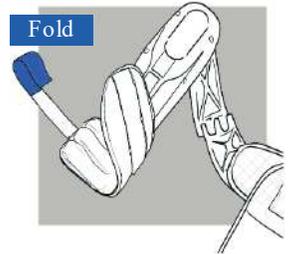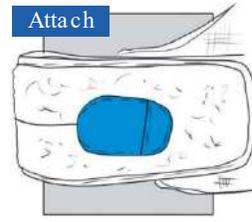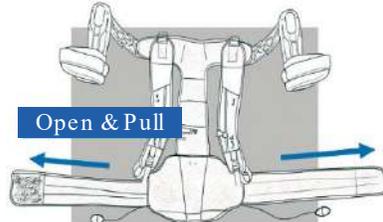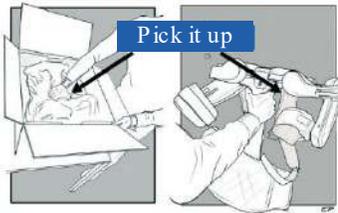


REGULATIONS & ADJUSTMENTS

Read the handbook carefully before wearing the device for the first time




SHOULDER WIDTH


Loosen the knob

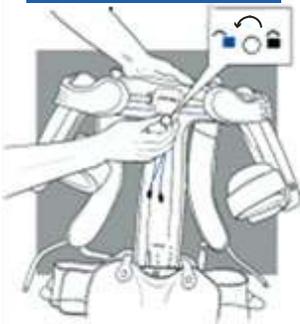


Pull/Release

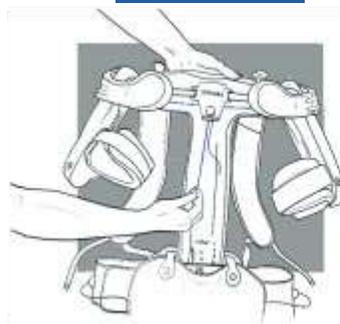

Tighten the knob

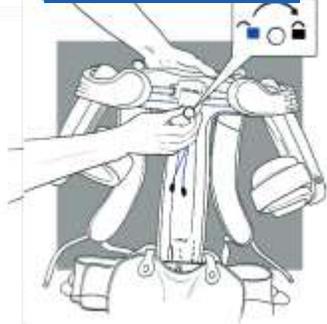


Refer to handbook for adjusting level

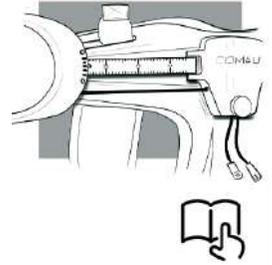


BACK LENGTH

Remove Velcro

Open & Pull

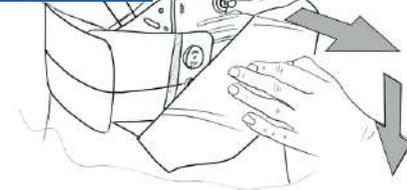


Set & Close

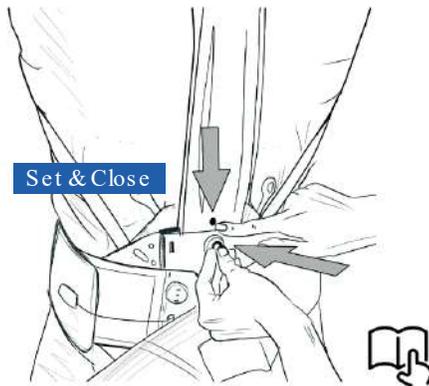

ACTIVE BOX ANGLE

Insert

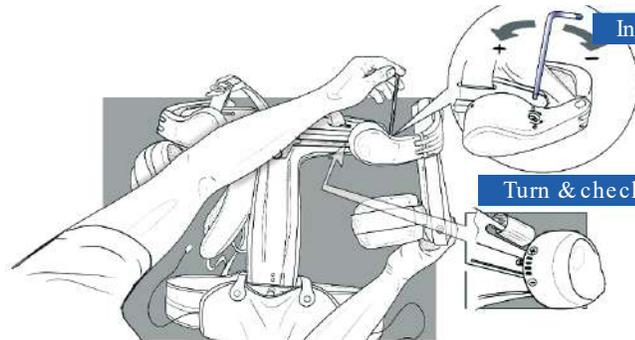

Turn & check the level



ASSISTANCE LEVEL SETTING

Do not jump from 8 to 1 or from 1 to 8

Not OK

Insert




Refer to Handbook for assistance level choice

Regulate from 1-8 level of assistance


Find your key 6mm in the Box
Make sure to insert the key completely

WEARING MATE

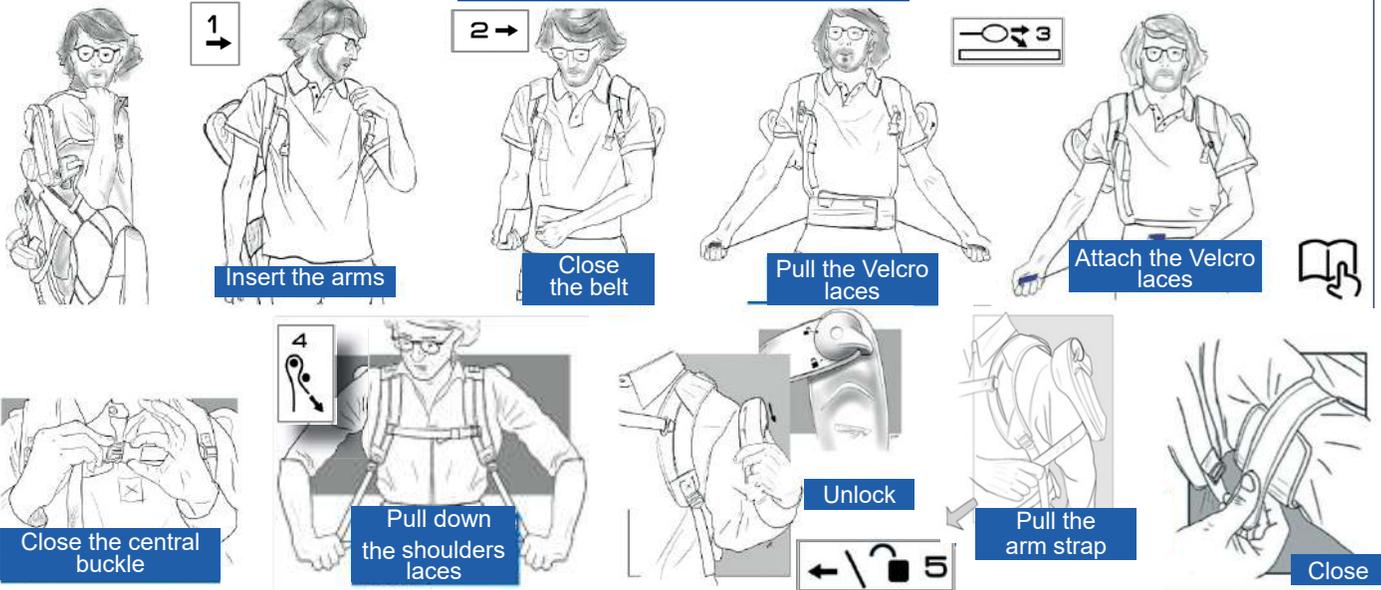


CORRECT FITTING


- 1** Make sure the Active Box is aligned with the top level of your shoulder. Make sure also that the lumbar curve of the spine (MATE-xt leaning on the iliac crests) and the upper part of the rear support is touching the scapulae.

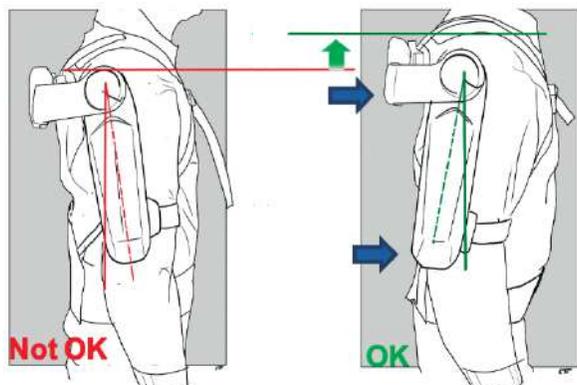

- 2** Make sure it does not rub your shoulders

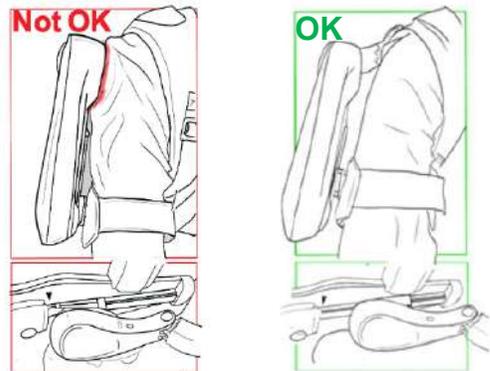

- 3** Make sure the Active Box is parallel to the arm

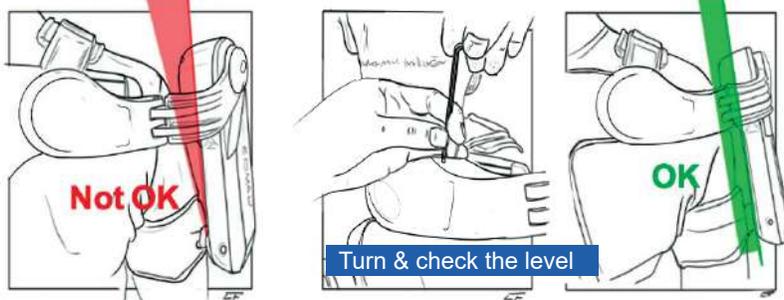

UNWEARING MATE

Push till the rear rest position



Follow us



The information contained in this brochure is supplied for information only. Comau products in their standard version. Edition Feb 2026

COMAU SPA reserves the right to modify specifications at any time without notice for technical or commercial reasons. The illustration does not necessarily show the latest version of the product.

Made in Comau